




User Manual

For **Nexturn Serial** - **Wireless Key&CCT** Sensor Switch


Product Range: /

Dimension Diagram unit: mm

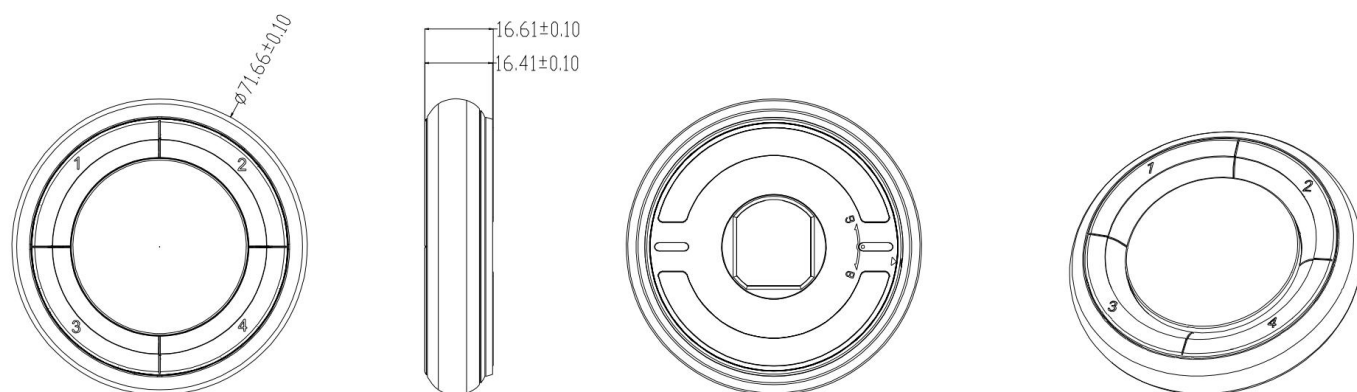


Product information		
1. Product Category	☐ wired ☒ wireless ☐ other	
2. Installation Method	☐ Hidden installation ☒ Surface mount	
3. Product Name	Wireless Key Sensor Switch	Wireless Key&CCT Sensor Switch
4. Product Function	Dimmer	CCT
5. Control Distance	In the open, 15 meters. Through the wall, 6 meters.	
6. Operating Voltage	12-24V	
7. Working Current	< 3.5mA	< 15mA
8. Standby Current	< 2.86uA	< 27uA
9. Battery Type	CR2450*1pcs	
10. Battery Capacity	600mAh	
11. Wireless Protocol	RF2.4G	
12. Operating Life	The switch can withstand 100,000 on/off operations.	
13. Operating Temperature	-10°C-40°C	
14. Operating Humidity	0%-85%RH	
15. Shell Material	Zinc Alloy	
16. Warranty Period	3 years	
17. Product Dimensions	71.6*71.6*16.4mm	
18. Mounting Type	The switch and base are attracted by structure.	

Pairing mode

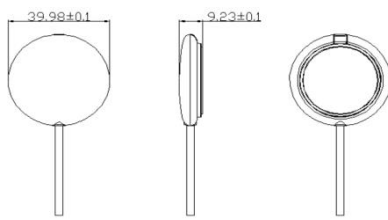

Powered by **Intux**'s LED Driver

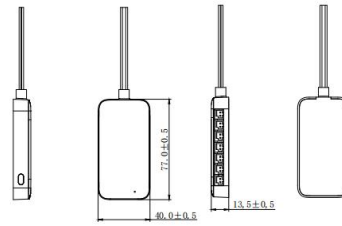

Powered by other LED Driver

Pairing mode 1:

The receiver is powered on, and the red indicator light is on for 20 seconds. During this period, you can perform code alignment by holding down the code key of the remote control for 5s. After code alignment is successful, the receiver indicator light blinks for 3 times and the light bar blinks once (indicating successful code alignment).

Pairing mode 2:

Hold down the receiver button for 5s when the power is off, and the red indicator will keep on for 20s. During this period, you can hold down the remote control button for 5s for code alignment. The receiver indicator will blink for 3 times and the light bar will blink once (indicating that the code alignment is successful).

Clear pairing mode:

Controller: press and press the button for 5s at the same time, the indicator flashes 3s quickly, and the light bar blinks synchronously for 3 times, indicating successful code clearing (indicating that the receiver saved by itself is cleared).

Receiver: Short press 3 times quickly, the indicator flashes 3 times quickly, and the light bar flashes 3 times synchronously (indicating that all transmitter code values are cleared)